

Key to wiring diagrams
Not all items fitted to all models

No.	Description	No.	Description
5	Front cigar lighter	385	Front ashtray illumination
10	Ignition distributor	389	Boot light
15	Alternator	391	Number plate LH light
20	LH horn	392	Number plate RH light
21	RH horn	394	Air con. control illumination
35	Battery	429	Fuel cut-off solenoid (stop solenoid)
40	Instrument cluster	430	Canister discharge solenoid
45	Ignition coil	431	Fast idling solenoid
50	Supply connector box	432	Idling actuator
52	Junction box	434	Canister solenoid
53	Water temperature control unit	437	Exhaust gas recirculation solenoid
55	Central door locking control unit	441	Vacuum advance solenoid
58	Remote control door locking receiver (PLIP)	443	Injection timing correction solenoid
59	Pre-heater (glow plugs) control unit	480	LH rear light
62	Earth connection box	481	RH rear light
100	Spark plugs	482	LH front foglight
101	Glow plugs	483	RH front foglight
130	Lights-on warning buzzer	484	LH rear foglight
140	Anti-lock braking ECU	485	RH rear foglight
141	Air conditioning ECU	486	LH dipped beams
142	Fuel injection ECU	487	RH dipped beams
144	Exhaust gas recirculation ECU	488	LH front direction indicator
152	Engine speed sensor	489	RH front direction indicator
155	LH front wheel sensor (ABS)	490	LH rear direction indicator
156	RH front wheel sensor (ABS)	491	RH rear direction indicator
157	LH rear wheel sensor (ABS)	492	LH sidelight
158	RH rear wheel sensor (ABS)	493	RH sidelight
160	TDC sensor	496	LH tail light
170	Flasher unit	497	RH tail light
180	Additional air control	498	LH reversing light
183	Air blower control	499	RH reversing light
211	LH column switch (lights, indicators, horn)	500	LH direction indicator repeater
212	RH column switch (front and rear wipers)	501	RH direction indicator repeater
215	Exterior mirror switch	502	LH headlight
254	Air horn compressor	503	RH headlight
255	Air con. compressor driving clutch	504	LH stop-light
270	HT coil suppressor	505	RH stop-light
300	Ignition switch	550	LH front speaker
302	Boot light switch	551	RH front speaker
305	Driver's door locking switch	554	LH rear speaker
306	Passenger's door locking switch	555	RH rear speaker
307	LH rear door closing switch	570	Injector
308	RH rear door closing switch	582	Refrigerated air switch
310	LH front door pillar switch	587	Front foglight switch
311	RH front door pillar switch	588	Rear foglight switch
312	LH rear door pillar switch	589	Hazard warning light switch
313	RH rear door pillar switch	590	Driver's window switch
314	Reversing light switch	591	Passenger's window switch (on driver's door)
315	Handbrake switch	592	Passenger's window switch (on passenger's door)
317	Hydraulic fluid level switch	597	Heated rear window switch
318	Throttle butterfly switch	608	Headlight adjustment device switch
319	Stop-light switch	650	Fuel gauge
322	Atmospheric pressure switch	660	Map reading light
326	Starter motor switch	671	Engine oil pressure switch
330	Post-heater switch	680	Ignition module
340	Airflow meter	681	Air blower control module
350	Starter motor	685	Digital clock

Key to wiring diagrams (continued)

Not all items fitted to all models

No. Description

694 Windscreen wiper motor
 695 Tailgate wiper motor
 696 LH front window motor
 697 RH front window motor
 703 Driver's door locking motor
 704 Passenger's door locking motor
 705 LH rear door locking motor
 706 RH rear door locking motor
 708 Tailgate locking motor
 712 Idling control stepper motor
 714 ABS hydraulic pump motor
 715 LH headlight adjustment device motor
 716 RH headlight adjustment device motor
 720 Engine cooling fan (single, or LH of two)
 721 RH engine cooling fan
 742 Central interior light
 743 Rear interior light
 750 LH front brake pads sensor
 751 RH front brake pads sensor
 755 Fuel pump
 757 Windscreen washer pump
 758 Rear screen washer pump
 765 Radio set
 770 Throttle spindle potentiometer
 772 Mixture adjustment potentiometer
 775 Pressure switch
 779 TDC sensor plug (petrol) or Water temp. sensor (Diesel)
 781 ABS diagnostic socket
 783 Injection diagnostic socket
 786 Headlight: LH main and dipped beams
 787 Headlight: RH main and dipped beams
 790 Air blower motor
 798 Injection timing cut-off relay
 804 Air conditioning relay
 805 Compressor cut-off relay (temperature)
 806 Front foglight relays
 807 Injection double relay
 809 Front window relay
 813 Engine cooling fan relay (fast speed)
 814 Engine cooling fan relay (slow speed)
 815 Engine cooling fan speed switchover relay
 819 Rear foglight relays
 820 Heated rear window relay
 822 Compressor cut-off relay (injection)
 827 Dim-dip relay (UK only)
 841 Window re-energising relay
 843 Air horn compressor relay
 844 ABS main relay
 845 Hydraulic fluid motor relay
 849 Post-heating cut-off relay
 857 Carburettor base heating resistance
 858 Dipped beams resistance (dim-dip)
 859 Air blower speed resistor
 860 Coding resistance
 862 Injector additional resistance
 876 RH rear view mirror
 880 Instrument lighting rheostat
 900 Oxygen sensor

No. Description

902 Engine oil level sensor
 903 Injection air pressure sensor
 904 Engine oil pressure sensor
 907 Injection air temperature sensor
 909 Injection water temperature sensor
 910 Water temp. sensor (control unit)
 912 Evaporator temperature sensor
 915 Water temperature switch sensor
 918 Engine oil temperature sensor
 962 Windscreen intermittent wipe timer
 963 Tailgate intermittent wipe timer
 970 Coolant temp. warning thermal switch
 971 Cooling fan thermal switch (radiator)
 974 Water temperature switch
 990 Heated rear window

Harness code

AB ABS
 AV Front
 CL Air conditioning
 CN Negative cable
 CP Positive cable
 EF Boot lighting
 FR Rear lights
 HB Interior
 MT Engine (and injection)
 MV Electric cooling fan
 PB Dashboard
 PC Driver's door
 PD RH rear door
 PG LH rear door
 PJ Headlight adjustment device
 PL Interior light
 PP Passenger's door
 RD RH rear
 RG LH rear
 RL Direction indicator side repeater
 TJ Headlight adjustment device switch
 UD RH brake pad wear
 UG LH brake pad wear
 VD RH side tailgate
 VG LH side tailgate

Colour code

B White
 Bl Blue
 G Grey
 Ic Clear/transparent
 J Yellow
 M Brown
 Mv Purple
 N Black
 Or Orange
 R Red
 Ro Pink
 V Green
 Vi Lilac

